


DSL Setup: Windows 98/95

1. Simply plug in modem and make all connections to your computer (see "Configuration" image below).
2. Restart computer, and go online.

Note: If this does not work, your PC needs to be configured to automatically obtain an IP. To do this use the following procedure.

1. Click on Start --> Settings --> Control Panel
2. Click on Network
3. Click on TCP/IP --> Ethernet Adapter from the list on installed Network Components
4. Select "Obtain an IP address automatically"
5. Click OK --> click OK

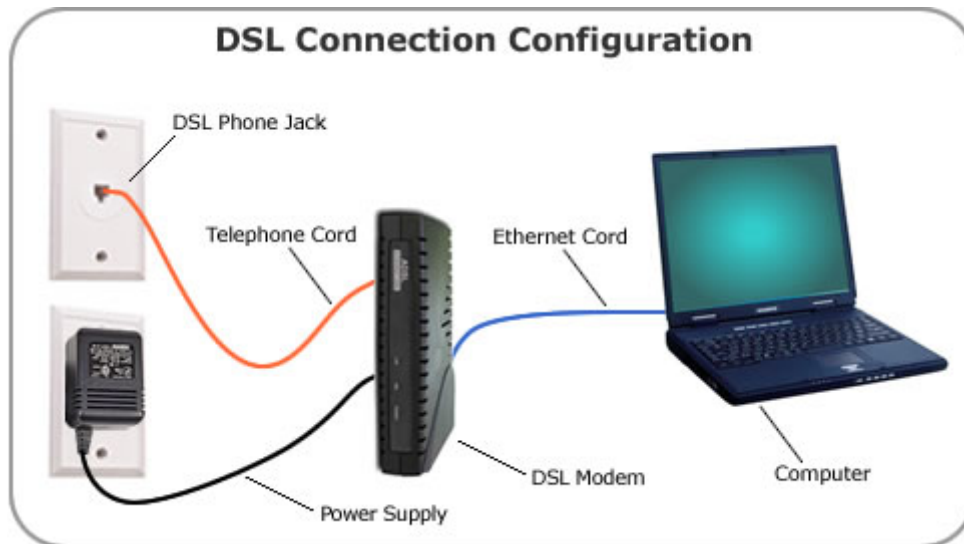

Note: Your DSL modem may look different to the one pictured above.