


SRC-300 Remote

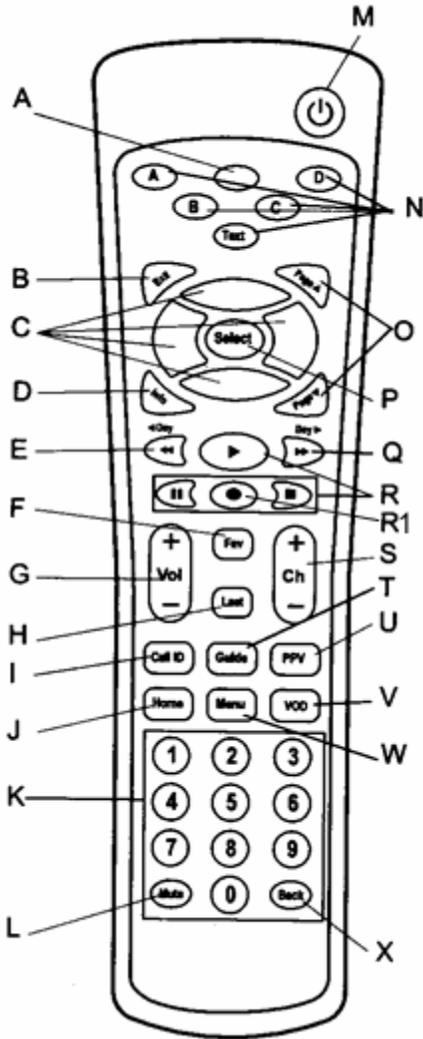

- A. Lights when any button on the remote is pressed. Also, when pressed and held starts programming sequences.
- B. Exits the current function.
- C. Move cursor in program guide and menus.
- D. Displays current channel and program guide and menus.
- E. Moves program guide back 24 hours.
- F. Scans through favorite channels.
- G. Adjusts TV volume.
- H. Tunes to last channel.
- I. Opens caller ID screen.
- J.* Displays web browser, if provided.
- K. Selects channels.
- L. Mutes and un-mutes TV sound.
- M. Powers TV on/off and tunes to default channel.
- N.* Reserved for tele-text functions.
- O. Pages up/down in interactive program guide and menus.
- P. Selects highlighted option.
- Q. Moves program guide forward 24 hours.
- R.* Video-on-demand controls.
- R1. Record (REC) Key, used in programming the remote.
- S. Changes program channel.
- T. Displays interactive program guide.
- U. Display Pay-per-view menu.
- V.* Launches VOD (Video-on-demand) menu, if provided.
- W. Displays main menu.
- X.* In the browser, moves back to the previous screen.

* key not available on some models

Programming the TV Code using the Code Search Method

This will allow your remote to control the Power and Volume on your TV

1. Press the LED key and hold it down until the LED flashes rapidly.
2. Press the REC key (the button with the red circle). The LED stops blinking at this point and stays on solid.
3. Press and release the POWER key. The remote is now in TV code scan programming mode.
4. Repeatedly press and release the UP button (above the SELECT button) to scan through all TV codes. ****When you reach the correct TV code, the TV will automatically turn on, or off if it was previously on. Note that the LED will flash rapidly once you have scanned through all the codes, and then it will continue to go through the codes again in a continuous wrap.**
5. Press the SELECT button to store the TV code. The LED flashes rapidly, then stops, indicating that the TV code has been stored.
6. Repeat procedure for each remote control.
7. If you press the up key too rapidly, you may pass the TV code before the time the TV turns on or off. If you are not sure you are sorting the correct TV code, press the down key slowly to cycle back through codes that have been previously scanned.
8. When the TV turns off, or on if it was previously off, press SELECT at that point to store the TV code.

Programming the Remote Control ID

This assigns the remote control to a particular TV (video stream)

1. Press the LED key and hold it down until the LED flashes rapidly.
2. Press the REC key (the button with the red circle). The LED stops blinking at this point and stays on solid.
3. Press the A key. The remote is now in programming mode.
4. Do ONE of the following:
 - For Main TV (with TV on channel 6): Press 1
 - For 2nd TV (with TV on channel 7): Press 2
 - For 3rd TV (with TV on channel 13): Press 3

Setting the Gateway ID

You should rarely (and probably never) need to do this!

1. Press the LED key and hold it down until the LED flashes rapidly.
2. Press the REC key (the button with the red circle). The LED stops blinking at this point and stays on solid.
3. Press the B key. The remote is now in programming mode.
4. Enter the three digit code assigned to your TV set top box. The valid range is 004-255. You Must enter a number with three digits, even if it contains leading zeroes. Examples of valid values are: 009, 012, 124, or 255.