


DSL Setup: Windows NT/2000

1. Simply plug in modem and make all connections to your computer (see "Configuration" image below).
2. Restart computer, and go online.

Note: If this does not work, your PC needs to be configured to automatically obtain an IP. To do this use the following procedure.

1. Click on Start --> Settings --> Network and Dial-up Connections --> Local Area Connection
2. Click on Properties
3. Click on Internet Protocol [TCP/IP] --> Properties
4. Select "Obtain an IP address automatically"
5. Select "Obtain DNS server address automatically"
6. Click OK
7. Restart computer and go online.

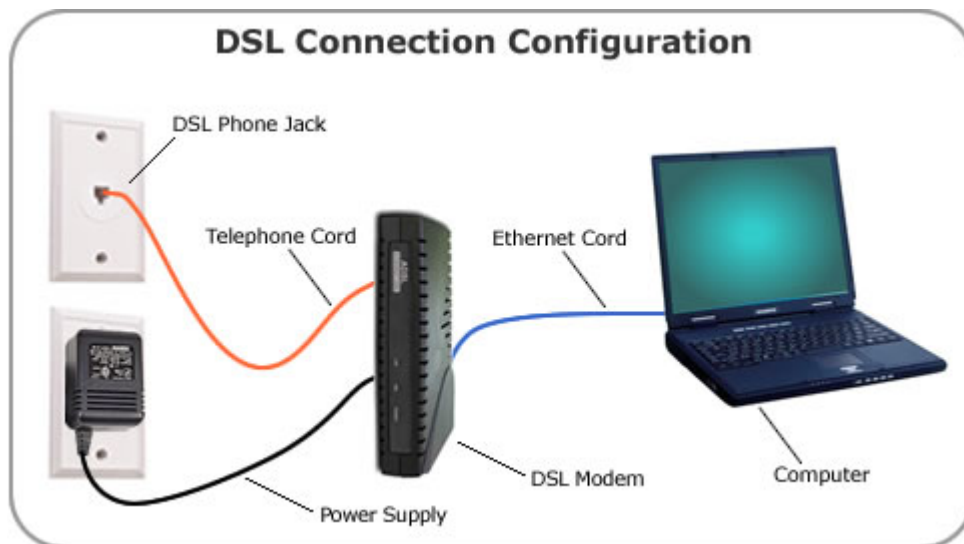

Note: Your DSL modem may look different to the one pictured above.